



SELF SERVICE GUIDE

SALES & SERVICE 0421 124 018

dj@ecotankaustralia.com.au

DRAINING ECOTANK

1. Always wear **heat resistance gloves, apron and safety glasses.**
2. Switch off the power and unplug the Ecotank by pulling the plug.
3. Move the Ecotank close to the draining location.
4. Attach the drainage pipe to the drain valve. Place the other end of the hose into floor drain and open drain valve.
5. Remove the basket and rinse out remaining debris.
6. Rinse the basket before replacing it into the Ecotank.
7. Close the drain valve. Remove the drainage pipe

REFILLING ECOTANK

1. Refill the Ecotank with **HOT** water up to indicate water level.
2. Open detergent bag and slowly pour in specified amount detergent into the Ecotank.
3. Ensure move the basket up and down several times that help to dissolving detergent.
4. Gently replace lid on the Ecotank. And plug the power cord and switch ON the Ecotank.
5. Set the thermostat 80-85 degrees (**Red** Indicator light will ON)
6. Allow 3 - 4 hours for Ecotank to reach (80-85 degree) temperature before cleaning your equipment

CAUTION HOT

WHY SCRUB WHEN YOU CAN SOAK?